

FactoryLink System Utilities


for

FactoryLink 7.5.x



IM-BAS

Version 2.0
Printed: Thursday, November 16, 2006

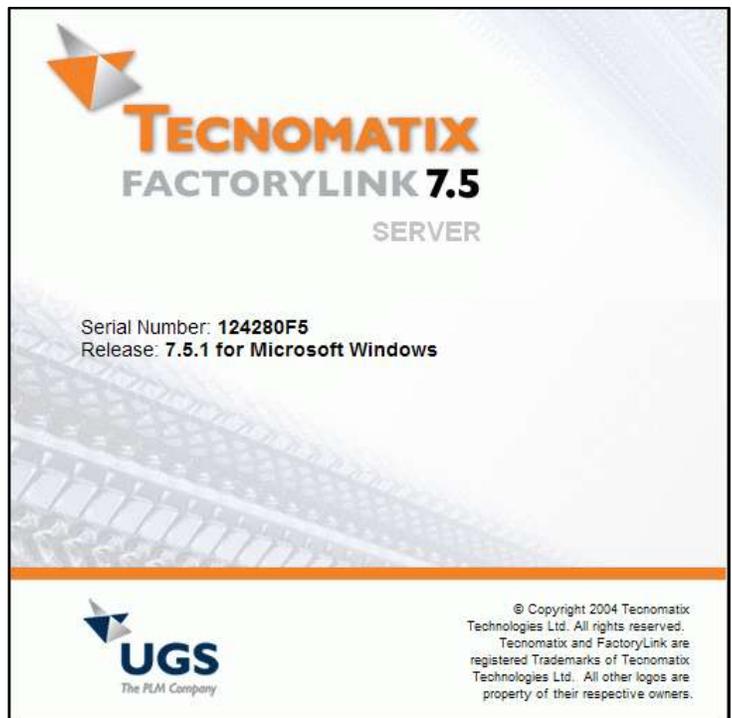



Introduction

The FLNTsys utility is a FactoryLink task, which enables NT or W2K system functionality's inside a FactoryLink application. These functions include enabling, disabling keys, request system information regarding disk space, screensaver settings, shutting down the system or logging off a user, logging event-message to the event viewer.

This manual is intended for use by a technician who is familiar with the FactoryLink ECS software. Covered in this manual are the principles of operation, installation and configuration of the software. Included in the shipment is a demo-application, which can be used as an example of how to implement the futures in your FactoryLink application.

This software is protected with a software key, a serial number and configuration sequence. Both are included in your shipment, registration is already completed on receiving the complete package.

FactoryLink is a registered trademark of United States Data Corporation, Richardson Texas USA.

RLD Automation
Van Sonsbeeckstraat 11
5344 JB Oss
The Netherlands

tel. +31(0) 412 655 990
fax +31(0) 412 655 991
e-mail : rldauto@tiscali.nl



Contents

| | |
|--|-----------|
| INTRODUCTION | 3 |
| CONTENTS | 4 |
| 1 OPERATION PRINCIPLE..... | 5 |
| 1.1 KEYSTROKE FILTERING | 5 |
| 1.1.1 <i>ActiveX keyboard filter component</i> | 5 |
| 1.2 SYSTEM SETTINGS | 6 |
| 1.3 EVENT VIEWER MESSAGES | 6 |
| 2 INSTALLATION | 7 |
| 2.1 SYSTEM REQUIREMENTS | 7 |
| 2.2 FLNTSYS INSTALLATION | 7 |
| 2.3 KEYBOARD FILTER START-UP | 10 |
| 2.4 FACTORYLINK TASK CONFIGURATION..... | 12 |
| 2.5 FLNTSYS TASK DE-INSTALLATION | 13 |
| 3 CONFIGURATION TABLES | 15 |
| 3.1 ENABLE/DISABLE KEYSTROKES | 16 |
| 3.2 SYSTEM SETTINGS | 20 |
| 3.3 EVENT LOGGING | 23 |
| 4 ACTIVEX CONTROL ‘KEYBOARD FILTER’ | 25 |
| 4.1 PROPERTIES | 27 |
| 4.2 METHODS | 27 |
| 5 ERROR MESSAGES..... | 29 |
| 6 LICENSE AGREEMENT | 31 |



1 Operation principle

The FLNTsys utility is a FactoryLink task which enables NT4 or W2K system functionalities inside a FactoryLink application. These functions include enabling, disabling keys, request system information regarding disk space, screensaver settings, shutting down the system or logging off a user, showing a simple message box to notify users.

The operation principle differs for the three different main features of the application, keystroke filtering, system settings and (simple) message boxes.

After installation a demo application and client builder project are present in the {FLINK}\mps\en directory, the application is stored as a multiplatform save file with the name: 'flntsys.mps'. The demo client builder project is in the file 'flntsys.cba'. After restoring and starting the application and the client builder project a screen with an overview of the capabilities of FLNTsys is shown to the user, see the figure below.

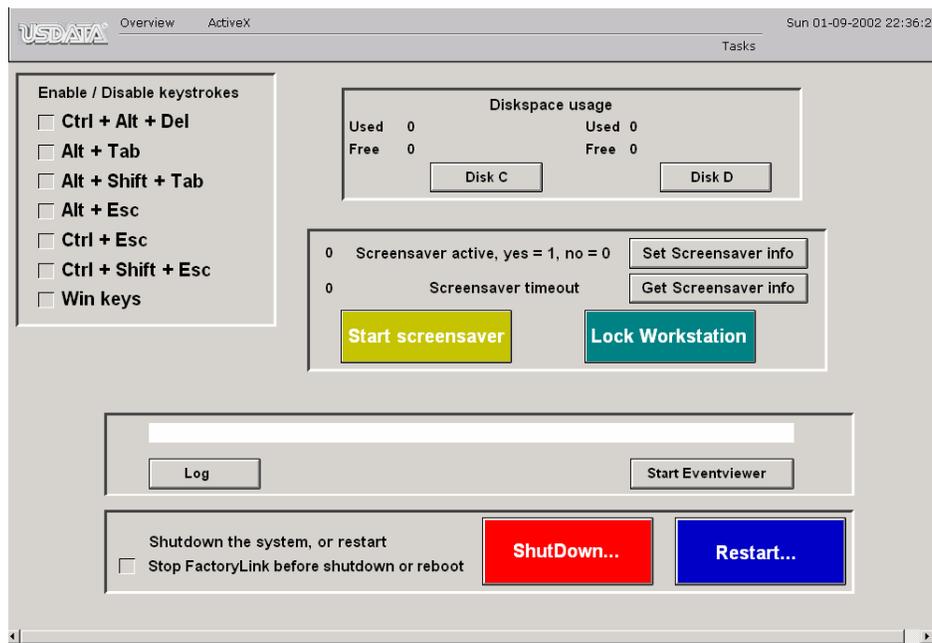


Figure 1.1. FactoryLink demo application.

1.1 Keystroke filtering

The FLNTsys utility is capable of filtering keystrokes from the keyboard buffer. The utility lets you specify which keys are to be filtered, these keystrokes can be altered from within a FactoryLink application. If a keystroke is filtered none of the (running) applications will receive this keystroke, it is removed from the keyboard buffer, so even before any program 'sees' the keystroke. In order to do this the utility depends on a device driver: KbFilter, which stands for Keyboard Filter. This device driver is just a normal device driver, its start-up options can be modified from the "control panel → Devices → Keyboard filtering" for NT4, or "Computer management → Device manager → Non-plug and play drivers → Keyboard filter for W2K".

As this driver attaches itself to the keyboard, it has the same class as a keyboard driver. This means you can start the driver manually (see the next figure), but you are not allowed to stop this device driver! NT will not allow you to stop a device driver of the keyboard class.

1.1.1 ActiveX keyboard filter component

The FLNTsys utility is designed as a FactoryLink task, and therefore allows you to filter keyboard events on the server which is running the FactoryLink application. The FactoryLink task can not filter keyboard events on a client system, only running a client builder application. In order to enable keyboard filtering on a client



system an ActiveX component, included in your shipment, should be installed on the client system. Together with the ActiveX control the keyboard filter device driver is installed.

With the ActiveX control "KeyboardFilter Control", keyboard filtering is possible from within a client builder application. Enabling and disabling of keystrokes can now be done from within the client builder application, using the scripting options of client builder.

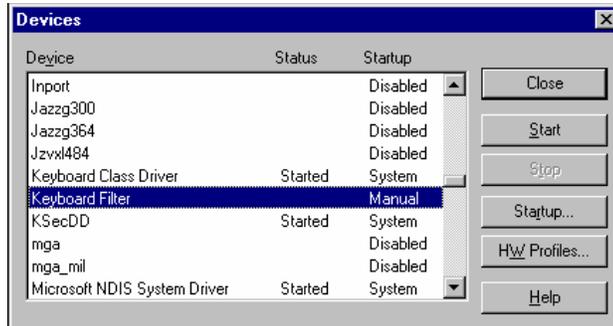


Figure 1.2. Control panel device list for NT4.

1.2 System settings

Several system settings can be queried or modified, they are divided in three main groups.

- ✦ Shutdown or logoff the system.
- ✦ Query information about free and used disk space
- ✦ Screen saver options

The shutdown and logoff commands allow you to logoff or shutdown, even reboot the system from within a FactoryLink application. Prior to shutting down or logging off, the currently active FactoryLink application is gracefully stopped.

Information about used and free disk space can be queried for the disks in your workstation. The results of a query are integer values representing the amount of free or used disk space in kBytes. The information is available in a standard FactoryLink tag of type analog or long analog.

The screen saver options allow you to activate the screensaver setting for the display. The option present the setting and querying of the inactivity time for a screen saver, the value is in seconds. Also the automatic activation of the screen saver can be enabled or disabled.

1.3 Event viewer messages

Messages can be written to the NT event log, these messages can be informal, warning or error messages. The messages are viewed with the standard event viewer of Windows NT.

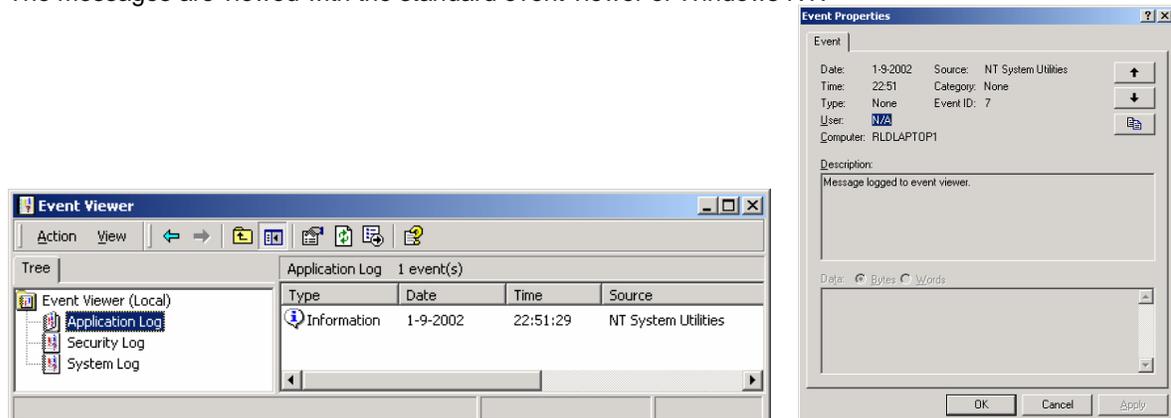


Figure 1.3. Logging to the event viewer.



2 Installation

2.1 System requirements

The FLNTsys utility will install and run on any IBM PC or PC-compatible computer equipped with:

- A processor equivalent to an Intel 80486 or later. RLD Automation recommends at least an Intel Pentium-class or compatible processor.
- A diskette station.
- At least 1.5 Mb of free hard disk space.
- Microsoft Windows NT 4.0, with at least service pack 4 installed; or Microsoft Windows 2000, with at least service pack 1 installed.
- USDATA FactoryLink ECS 7.0

2.2 FLNTsys installation

The main objective of the FLNTsys installation is copying two groups of files from the installation media to your workstation. In the first group all the files related to the FactoryLink environment are copied to your FactoryLink system directory (normally set by the 'FLINK' environment variable), including both the runtime and configuration options. The second group consists of the files for the keyboard filter device driver; those files are placed in the Windows NT system directory.

To start the installation locate the 'setup.exe' file on the installation media. Make sure that you are logged in as a user with administrator rights, otherwise the installation will be aborted. Installing a device driver requires administrator rights!



Setup.exe

Figure 2.1. Setup the application (large icon view).

After starting the setup, some questions need some answers, most important one is where your FactoryLink system directory is located. The setup assumes that the environment variable %FLINK% is correct, but gives you the chance to change the directory. All the steps in the installation process are presented in the figures to come.

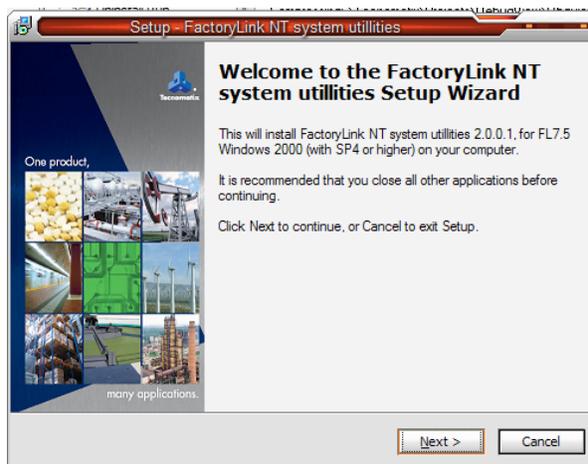


Figure 2.2. The welcome wizard panel.

The first screen displayed is the 'Welcome' screen, click 'Next >' to continue. The next wizard panel displays the FLNTsys end-user license agreement. read this agreement carefully. If you install FLNTsys you agree to abide by the terms of the license.



If you do not agree to the license terms, click 'I do not accept the agreement'. Setup will quit immediately. Otherwise, click 'I accept the agreement' followed by 'Next' to continue.

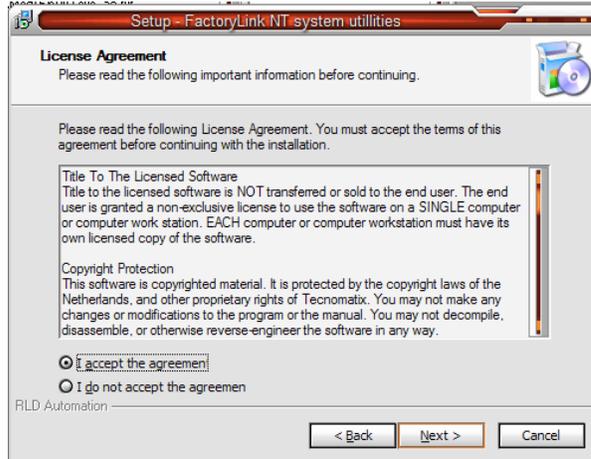


Figure 2.3. The software license agreement.

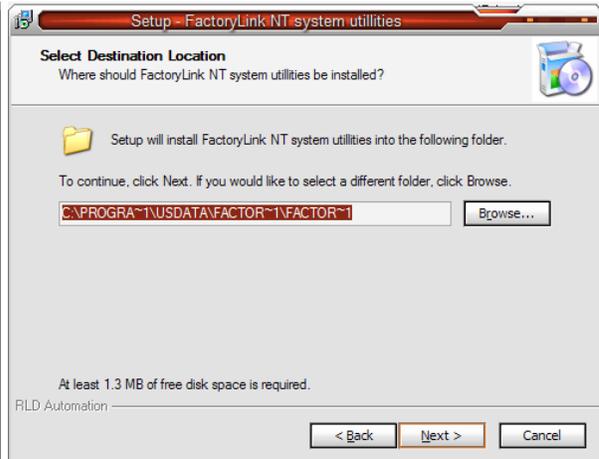


Figure 2.4. Select destination directory

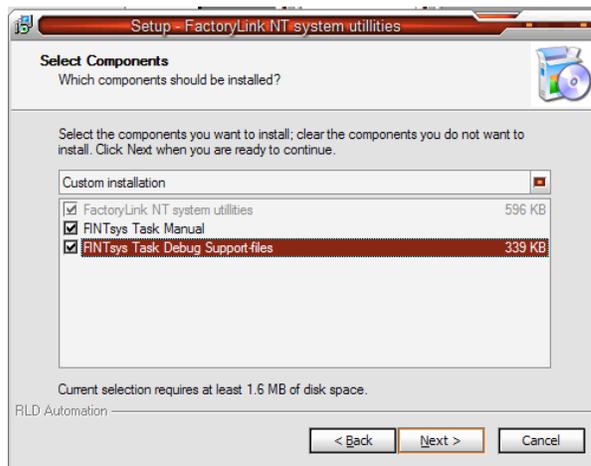


Figure 2.5. Select the type of installation

Use the browse window to specify a directory for the FactoryLink system files, in case the one selected by the set-up wizard is not the one where you want to install this FactoryLink task.

Next you have to choose the setup type: a full installation or a custom installation. for a custom installation you can select the server and/or client part of the FINTsys utility. the server part of the application is the FactoryLink task and configuration environment for the Configuration Explorer. The client part is the ActiveX control to enable or disable keystrokes from within a Client Builder application. The keyboard filter driver which hooks to the system keyboard driver is always installed, as are the documentation files.

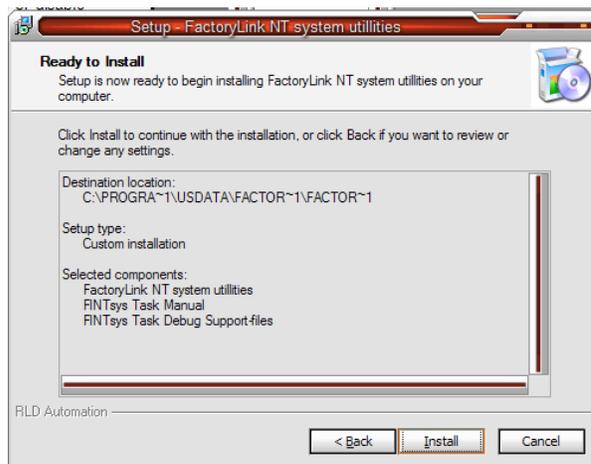


Figure 2.6. Ready to install the application.

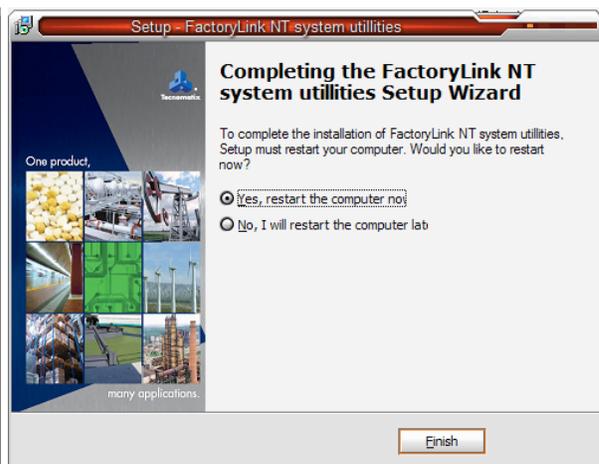


Figure 2.7. Installation is completed.



You need to confirm your settings and requirements, before the actual installation process is started. Setup requires you to restart your computer in order to complete your FLNTsys installation and to ensure that the Keyboard filter driver is recognized by your system. If you have other work you must do, select 'No, I will restart the computer later', then click 'Finish'. Otherwise select 'Yes, restart the computer now', then click 'Finish' to reboot your system.

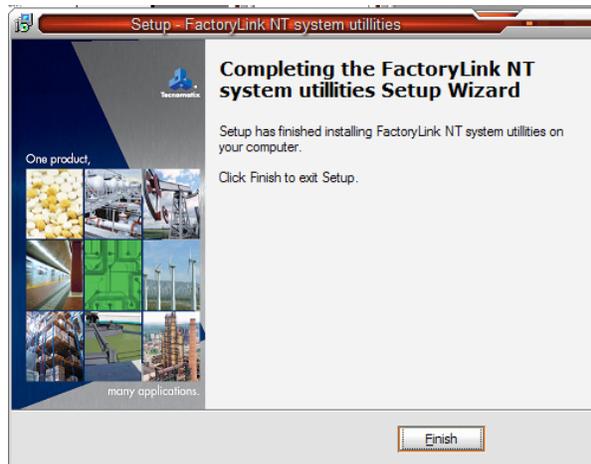


Figure 2.8. Finish the installation (no restart required).



2.3 Keyboard filter start-up

The keyboard filter device driver is responsible for filtering the keystrokes, before any application gets the keys. If this device driver is not installed or running, the FLNTsys application will not be able to filter any keystroke. After installation the keyboard filter device driver has a start-up priority of manual. This means you need to start the device driver manually, see the figure below. Normally this priority can be set to system or automatic. Remember that you need administrator rights to change the start priority, and to manually start the driver. Set startup priority to 'Automatic' if you want the driver to start everytime the system starts-up.

FactoryLink NT System Utilities

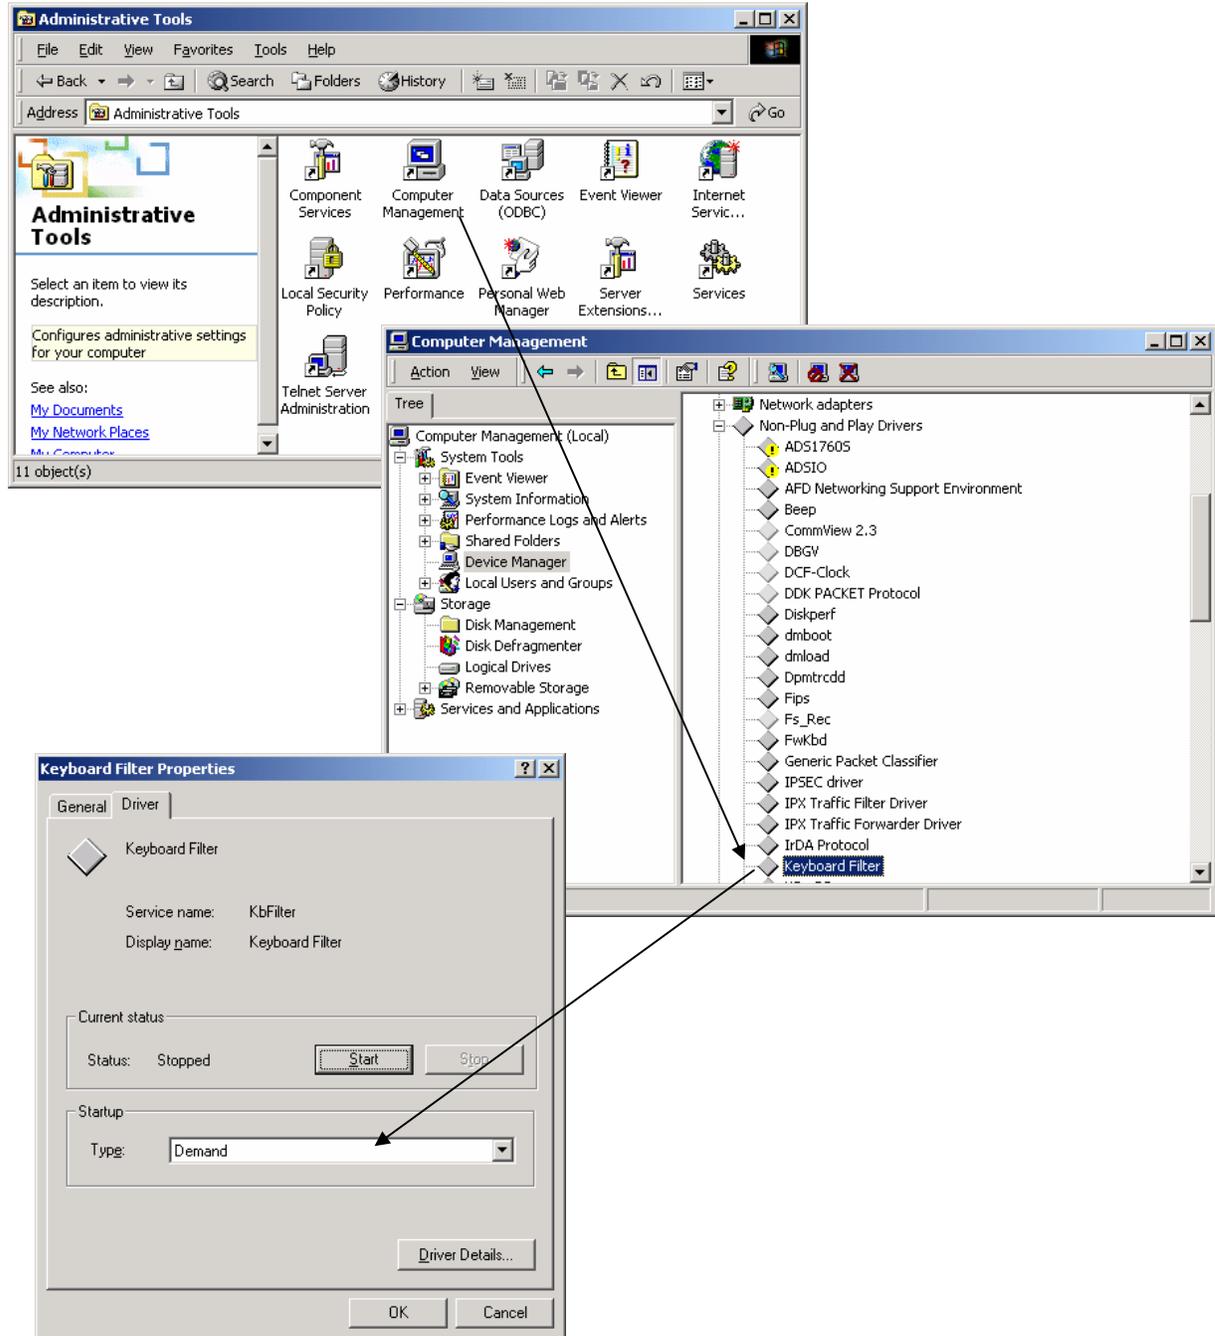


Figure 2.9. Start-up priority of the keyboard filter device driver for Windows2000.

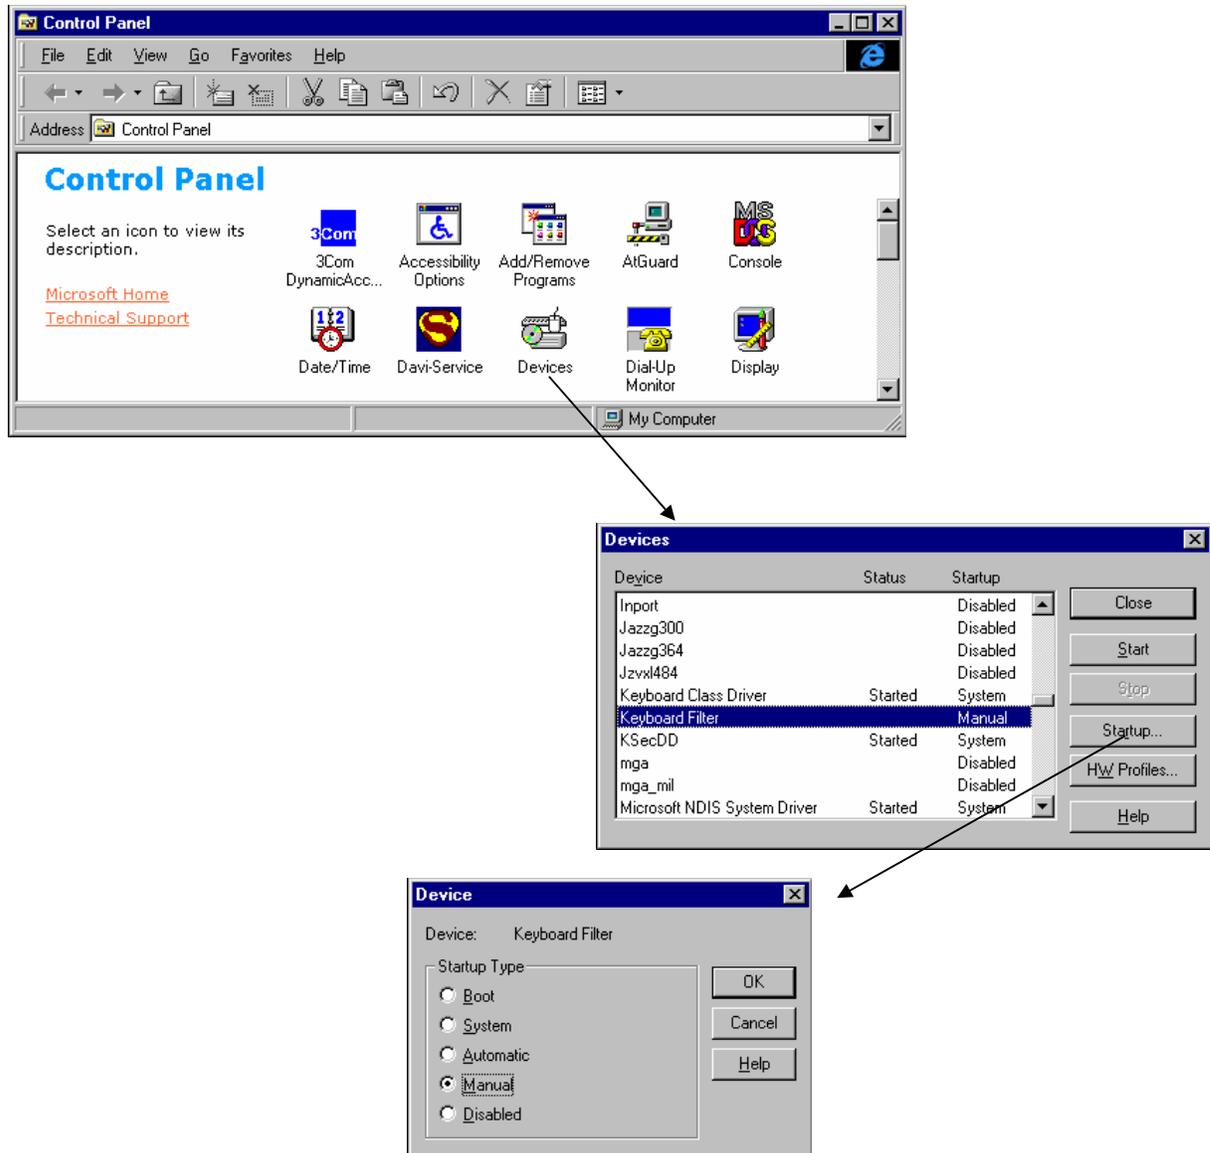


Figure 2.10. Start-up priority of the keyboard filter device driver for NT4.

If after installation the registry settings are not set, you can install the driver manually by running 'regedit kbfilter.reg', remember that you need administrator rights. The file with the registry settings can be found in your windows directory: %Systemroot%\system32\drivers.



2.4 FactoryLink task configuration

In order to activate the utility as a FactoryLink task it needs some configuration in the 'system configuration' table of the FactoryLink Configuration Explorer.

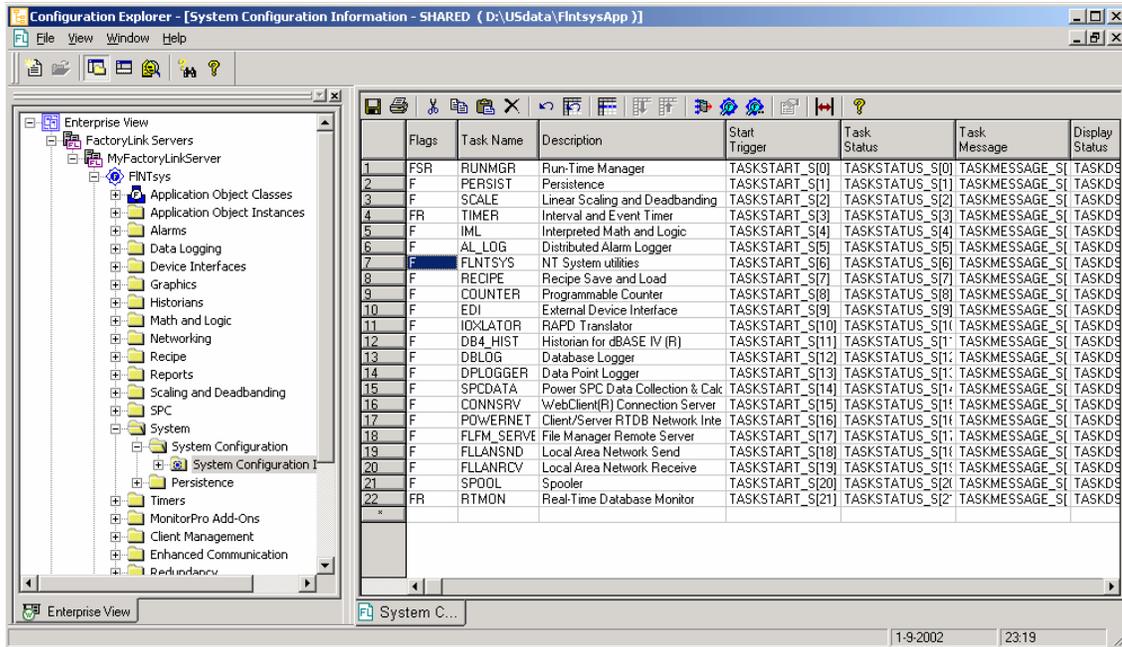


Figure 2.11. FactoryLink task definition.

The required settings for the FLNTsys task are its taskname and executable name, the last one is not visible in the figure above, but can be reached by panning through the configuration row. the following settings apply:

Task Name = FLNTSYS
 Executable File = bin/flntsys

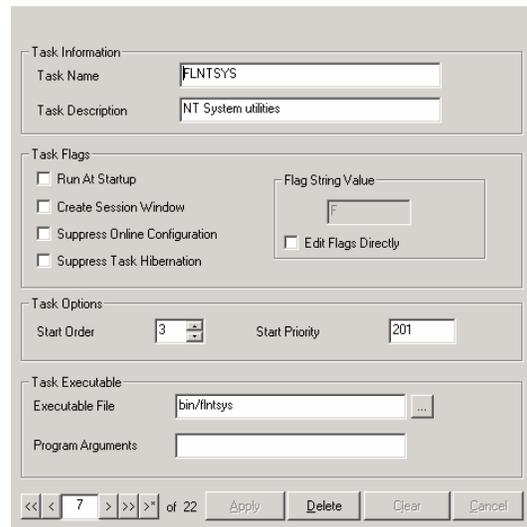


Figure 2.12. FINTsys task definition.



2.5 FINTsys task de-installation

De-installation of the FINTsys task is done through the Control Panel applet 'Add/Remove Programs'. The FINTsys task has an entry in the list of applications, which can be de-installed: 'FactoryLink NT System Utilities'.

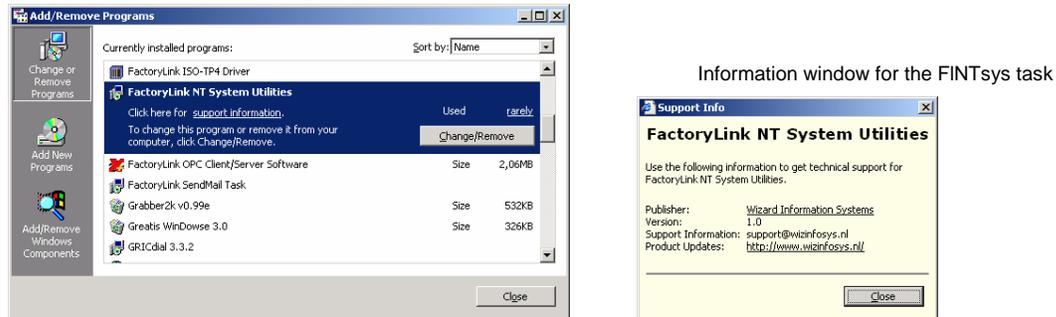


Figure 2.13. Control Panel applet for removing the FINTsys task.

Clicking on the button Change/Remove allows you to remove the FINTsys task from the system. Before the deleting of files starts, you are asked to confirm the removal of the application.





3 Configuration tables

The configuration tables for the NT system utilities can be accessed with the FactoryLink Configuration Explorer. For general information about entering data in FactoryLink configuration tables refer to the FactoryLink Manual. In the Configuration Explorer select 'Other tasks', one table entry 'NT System utilities' appears. Opening this option gives you the three main configuration parts of the task: 'Enable/Disable Keystrokes', 'Log to the Event Viewer' and 'System Settings'. These three configuration panels allow entering configuration information for the three different functionality's of the FactoryLink application: enabling or disabling keystrokes, logging messages to the event viewer and retrieving or setting system parameters.

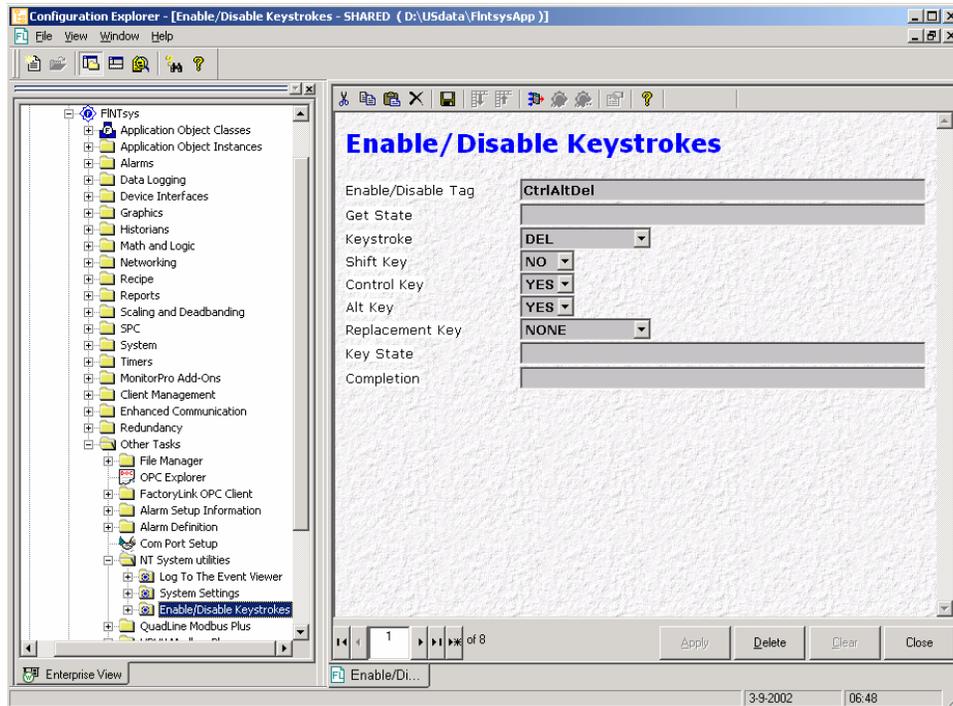


Figure 3.1. FactoryLink configuration Explorer.



3.1 Enable/Disable keystrokes

The 'Enable/Disable Keystrokes' panel is used to filter keys from the keyboard. Filtering is made active with a digital tag, filtering is set active with a digital value of ON (value is '1'). In case of active filtering the defined keystroke is removed from the keyboard buffer, this means no application will receive this keystroke. A keystroke can be combined with any combination of the alt, shift or control keys. For windows NT care should be taken with the combination 'Ctrl + Alt + Del', if this key combination is disabled, the workstation should not be locked, because the same keystroke is used to unlock a workstation and allow the user to enter a username + password to return to his desktop.

In fact the same applies to a screensaver, a screensaver can be used with and without a password, when using a password the screensaver ends only if the keys 'Ctrl + Alt + Del' can be pressed!

Figure 3.2. Configuration panel for keystroke filtering.

Every definition in the configuration panel completely defines the filtering behaviour for a particular keystroke. All the fields are discussed in the same order as they are presented in the configuration panel.

Enable/Disable Tag

A Digital tag which enables or disables the filtering (or removal of the keyboard buffer) of the defined keystroke (the keystroke is defined in the next field). The value of the tag defines the filtering type, value OFF (tag value is '0') enables the keystroke, the keystroke is not removed from the keyboard buffer. A value of ON (value is '1') disables the keystroke, the keystroke is upon detection (that is entrance in the keyboard buffer) removed from the keyboard buffer.

entry ✓ Required
entry type Tagname, tag type: DIGITAL

Get State

A Digital tag used as a trigger to retrieve the current state of the keystroke: enabled or disabled. The current state is returned as a tag value, this tag is defined in the field 'Key State'. The current state is only retrieved when the trigger is activated: the value of the digital tag is 'ON', and the change bits of the tag is set (indicating a value change from 'OFF' to 'ON' or a 'forced' write).

entry Optional
entry type Tagname, tag type: DIGITAL

Keystroke

The keystroke removed from the keyboard buffer if the value of the digital tag in the 'Enable/Disable Tag' field has the value 'ON'. A selection list is provided to select the keystroke, the keystroke to filter must be in



this selection list. If you may need more keystrokes then the ones defined, please feel free to contact us, the list can easily be extended! Standard the following keystrokes are provided:

| Selection | Keystroke name |
|-------------|---------------------|
| DEL | Delete key |
| ESC | Escape key |
| TAB | Tab key |
| FLYWINL | Left windows key |
| FLYWINR | Right windows key |
| POPUPMENU | |
| F1 | Function key 1 |
| F2 | Function key 2 |
| F3 | Function key 3 |
| F4 | Function key 4 |
| F5 | Function key 5 |
| F6 | Function key 6 |
| F7 | Function key 7 |
| F8 | Function key 8 |
| F9 | Function key 9 |
| F10 | Function key 10 |
| F11 | Function key 11 |
| F12 | Function key 12 |
| CAPS_LOCK | Caps Lock key |
| PRINTSCREEN | Print screen button |
| ENTER | Enter key |
| BACKSPACE | Back space key |
| SCROLL_LOCK | Scroll lock key |
| NUM_LOCK | Numeric Lock key |
| INSERT | Insert key |
| HOME | Home key |
| PAGE_UP | Page up key |
| DELETE | Delete key |
| END | End key |
| PAGE_DOWN | Page down key |
| UP | Up arrow key |
| LEFT | Left arrow key |
| RIGHT | Right arrow key |
| DOWN | Down arrow key |

FactoryLink NT System Utilities

- entry ✓ Required
- entry type Keyword from a selection list.
- default DEL

 **Shift key**

The keystroke to filter can be combined with the shift, ctrl or alt key and any combination of these keys. This field defines if the shift key needs to be pressed together with the keystroke for removing the keystroke from the keyboard buffer. A value of 'YES' sets the combination to: Shift + Keystroke.

- entry ✓ Required
- entry type Keyword form a selection list: YES, NO, Y, N
- default NO

 **Control key**

The keystroke to filter can be combined with the shift, ctrl or alt key and any combination of these keys. This field defines if the control key needs to be pressed together with the keystroke for removing the keystroke from the keyboard buffer. A value of 'YES' sets the combination to: Ctrl + Keystroke.

- entry ✓ Required



entry type Keyword form a selection list: YES, NO, Y, N
 default NO

Alt key

The keystroke to filter can be combined with the shift, ctrl or alt key and any combination of these keys. This field defines if the alt key needs to be pressed together with the keystroke for removing the keystroke from the keyboard buffer. A value of 'YES' sets the combination to: Alt + Keystroke.

entry ✓ Required
 entry type Keyword form a selection list: YES, NO, Y, N
 default NO

Replacement key

Instead of removing the keystroke from the keyboard buffer the key can be replaced with another key. For example the printscreen key: this keystroke is normally handled by NT, and is not received by the FactoryLink graphics task. Replace this keystroke with 'F12' and the graphics task gets the 'F12' key any time the printscreen button is pressed. If you define a graphics 'print screen' action for 'F12' key, a print of the current screen will be generated every time the printscreen button is pressed.

entry ✓ Required
 entry type Keyword from a selection list.
 default NONE

| Selection | Keystroke name |
|-------------|---------------------------|
| NONE | No replacement key active |
| DEL | Delete key |
| ESC | Escape key |
| TAB | Tab key |
| FLYWINL | Left windows key |
| FLYWINR | Right windows key |
| POPMENU | |
| F1 | Function key 1 |
| F2 | Function key 2 |
| F3 | Function key 3 |
| F4 | Function key 4 |
| F5 | Function key 5 |
| F6 | Function key 6 |
| F7 | Function key 7 |
| F8 | Function key 8 |
| F9 | Function key 9 |
| F10 | Function key 10 |
| F11 | Function key 11 |
| F12 | Function key 12 |
| CAPS_LOCK | Caps Lock key |
| PRINTSCREEN | Print screen button |
| ENTER | Enter key |
| BACKSPACE | Back space key |
| SCROLL_LOCK | Scroll lock key |
| NUM_LOCK | Numeric Lock key |
| INSERT | Insert key |
| HOME | Home key |
| PAGE_UP | Page up key |
| DELETE | Delete key |
| END | End key |
| PAGE_DOWN | Page down key |
| UP | Up arrow key |
| LEFT | Left arrow key |
| RIGHT | Right arrow key |
| DOWN | Down arrow key |



Key State

If defined this tag has the current filtering state of a keystroke, that is after setting the filtering state with the 'Enable/Disable Tag' or after activating the trigger 'Get State'. The tag value can be 'ON', indicating a disabled keystroke, or 'OFF', indicating an enabled keystroke.

entry Optional
entry type Tagname, tag type: DIGITAL, ANALOG

Completion

After setting or retrieving the filtering state of a keystroke, and all output tag's are written, the tag defined here is forced to 'ON'. This tag can be used to signal the completion of setting/retrieving the filtering state of a keystroke.

entry Optional
entry type Tagname, tag type: DIGITAL, ANALOG



3.2 System settings

The 'System Settings' panel is used to change system settings or perform system actions. There are different groups of actions or settings. The first group is for shutting down the system, depending on the configuration of your system the system can be shutdown, powered off or logged off. The success of every one of these actions depends on the settings for security, if a logged on user does not have the privilege to shutdown the system, executing the action will not result in shutting down the workstation. Prior to shutting down (or logging off) the complete FactoryLink application is stopped. The second group deals with disk space, both the numbers of kBytes free disk space and used disk space can be requested. The result will be available as a numeric tag value. In the third group settings for the screen saver can be requested and set. The inactivity time before a screensaver gets active can be queried and changed. The setting if a screensaver should appear after some time of inactivity can be read and changed.

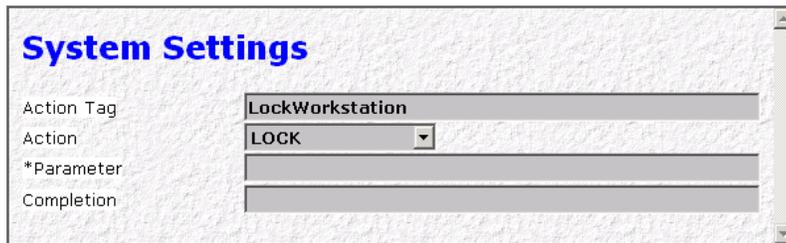


Figure 3.3. Configuration panel for system settings and actions.

Every definition in the configuration panel completely defines a setting or action. All the fields are discussed in the same order as they are presented in the configuration panel.

FactoryLink NT System Utilities

Action Tag

Digital tag associated with the action defined in the next field, the tag is used as a trigger tag to start the action. For a digital trigger tag this means the value and the change flag for the tag must be both 'ON' for executing the action. The actions are described in the next field.

entry ✓ Required
 entry type Tagname, tag type: DIGITAL

Action

The action to perform if the trigger defined in the previous field is active. A selection list is provided to select the action, the action must be in this selection list. If you may need more or different actions then the ones defined, please feel free to contact us, on request the list can be extended. In the table below the possible actions are listed, together with a description. For some action the next field '*Parameter' is essential, for the action this field is interpreted as a parameter. It can be input or an output parameter for an action.

| Action | Description | Parameter |
|----------|--|-----------------|
| LOGOFF | Log the current user off, FactoryLink application is stopped prior to logging off. | <i>not used</i> |
| POWEROFF | Log the current user off, shutdown and power off the workstation. The FactoryLink application is stopped prior to logging off. Note that your workstation should have powermanagement installed properly for correct functioning of this action. | <i>not used</i> |
| REBOOT | Log the current user off, shutdown the workstation and reboot. The FactoryLink application is stopped prior to logging off. | <i>not used</i> |
| SHUTDOWN | Log the current user off, shutdown the | <i>not used</i> |



| Action | Description | Parameter |
|---------------|---|--|
| | workstation. The FactoryLink application is stopped prior to logging off. | |
| SCREENSAVER | Activate the current installed screen saver. Don't move mouse or hit the keyboard after activation, otherwise the screensaver will end... Tag triggers the activation of the screensaver, triggering is on the change bit, any value allowed, except for a digital tag which also needs a value of 1 (ON). | <i>not used</i> |
| SET_SCRNSAVER | Boolean setting for the screensaver: the parameter value determines if a screensaver after a certain time of inactivity is displayed. The value is set for the workstation. | Digital value 0, 1 to prevent or allow a screensaver after some time of inactivity. |
| GET_SCRNSAVER | Boolean setting for the screensaver: the parameter value determines if a screensaver after a certain time of inactivity is displayed. The value is queried from the workstation. | Tag tag has the actual setting for the screensaver activation: 0 means screensaver will never be activated, 1 means that the screensaver will get active after a certain time of inactivity. |
| SET_SCRNTIME | The inactivity time in seconds before a screensaver gets active. Note: the activation of a screensaver should be allowed! The value is set for the workstation. | Decimal value representing the inactivity time in seconds, ranging from 1 and up. |
| GET_SCRNTIME | The inactivity time in seconds before a screensaver gets active. Note: the activation of a screensaver should be allowed! The value is queried from the workstation. | Tag which has the actual value of the inactivity time in seconds after execution of the action. |
| SET_PSWSAVER | A screensaver can be password protected, with this action the current password protection is set. | Digital value 0, 1 to set or remove password enabling of the screensaver. |
| GET_PSWSAVER | A screensaver can be password protected, with this action the current password protection is retrieved. | Tag that has the actual value of the password enabling of the screensaver, 1 means that the screensaver is password protected. |
| SET_LOCK | After pressing Control+Alt+Delete, a security screen will pop-up, on this screen there is a button to lock the workstation, this button can be enabled or disabled. With this action the button state is set to enabled or disabled. | Digital value 0, 1 to enable or disable the 'lock' button on the security screen. |
| GET_LOCK | After pressing Control+Alt+Delete, a security screen will pop-up, on this screen there is a button to lock the workstation, this button can be enabled or disabled. With this action the actual button state is retrieved. | Tag that has the actual value of the state of the 'lock' button on the security screen, 1 means the button is disabled. |
| SET_TASKM | After pressing Control+Alt+Delete, a security screen will pop-up, on this screen there is a button to start the task manager, this button can be enabled or disabled. With this action the button state is set to enabled or disabled. | Digital value 0, 1 to enable or disable the 'task manager' button on the security screen. |
| GET_TASKM | After pressing Control+Alt+Delete, a security screen will pop-up, on this screen there is a button to start the task manager, this button can be enabled or disabled. With this action the actual button state is retrieved. | Tag that has the actual value of the state of the 'task manager' button on the security screen, 1 means the button is disabled. |
| FREE_? | Requests the amount of free disk space in kBytes of drive ?. | Tag which has the actual amount of free disk space. |
| USED_? | Requests the amount of used disk space in kBytes of drive ?. | Tag which has the actual amount of used disk space. |

entry ✓ Required
 entry type Keyword from a selection list.
 default SHUTDOWN



*Parameter

Parameter value associated with the action defined in the previous field. The entry can be a fixed parameter (or numerical value) or a tag name. In case of a tag the application uses the tag value as the parameter value. This applies only to parameters, which are 'inputs', for the action, see the description of the actions in the table above. For output parameters only a tag name is useful, the application will set the tag value to the result of the action.

entry Optional
entry type Tagname, tag type: DIGITAL, ANALOG, LONG ANALOG, FLOAT

Completion

After executing an action, and if needed writing a value to the parameter tag, the tag defined here is forced to 'ON'. This tag can be used to signal the completion of an action.

entry Optional
entry type Tagname, tag type: DIGITAL, ANALOG



3.3 Event Logging

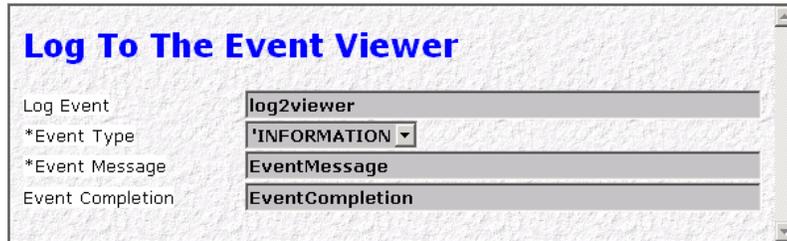


Figure 3.4. Configuration panel for event logging.

Every row in the configuration panel completely defines an event logging mechanism. All the fields are discussed in the same order as they are presented in the configuration panel.

Log Event

Digital tag used as a trigger to start the logging action, the type of event and the message logged are defined with the next two fields. For a digital trigger tag this means the value and the change flag for the tag must be both 'ON' to start the logging action.

entry ✓ Required
 entry type Tagname, tag type: DIGITAL

*Event Type

Type of the event logged is defined with this field, the entry types allowed are an alphanumeric string or an analog tag. Three different types are possible, every one of them has its own icon in the event viewer: Information, error or warning message. See the figure and table below for the appearance in the event viewer and the associated icons for every type. The alphanumeric allowed entries in the field correspond with a decimal value of 0..2, this value is the equivalent of the selections 'INFORMATION', 'WARNING' and 'ERROR'. And these are the only values accepted if an analog tag name is entered in the field, values less than zero are (internally in the task) set to zero, and values greater than two are (internally in the task) set to 2. Don't forget to start the selection text with an apostrophe ', only with this sign the Configuration Explorer will interpret the entry as a (static) selection, otherwise the entry is assumed to be a tag name.

| Type | Date | Time | Source |
|-------------|----------|----------|---------------------|
| Warning | 3-9-2002 | 20:51:05 | NT System Utilities |
| Error | 3-9-2002 | 20:48:47 | NT System Utilities |
| Information | 3-9-2002 | 20:48:03 | NT System Utilities |

| Selection | Decimal | Icon |
|-------------|---------|------|
| WARNING | 0 | |
| INFORMATION | 1 | |
| ERROR | 2 | |

Figure 3.5. Event types in the event viewer.

entry ✓ Required
 entry type Tagname, tag type: ANALOG
 Keyword from a selection list: INFORMATION, ERROR, WARNING
 default INFORMATION

*Event Message

The message logged to the event viewer can be static or dynamic, dynamic means the entry in this field is a message tag, the text in the tag is used as the log-message. For a static configuration the message text is



configured in the panel, don't forget to start the text with an apostrophe '. Only with this sign the Configuration Explorer will interpret the entry as static text, otherwise the entry is assumed to be a tag name.

entry Optional
entry type Tagname, tag type: MESSAGE
 Alphanumeric string of up to 250 characters

Completion

After the logging is completed the tag defined here is forced to 'ON'. This tag can be used to signal the completion of a logging action.

entry Optional
entry type Tagname, tag type: DIGITAL, ANALOG



4 ActiveX Control 'Keyboard Filter'

If you have installed the 'client' part of the FINTsys application, a new ActiveX control is now registered on your system: Keyboard Filter. Together with this control the keyboard filter driver is installed on the system, together they can filter keystrokes from the keyboard on a 'client' system. That is a system without an active FactoryLink server! The control is easily integrated in Client Builder, and can be used in combination with the FINTsys FactoryLink server task.

To enable keystroke filtering from within a Client Builder application one must install the ActiveX control from the installation media, and next select the control as a favourite in the Client Builder environment, see the figure below.

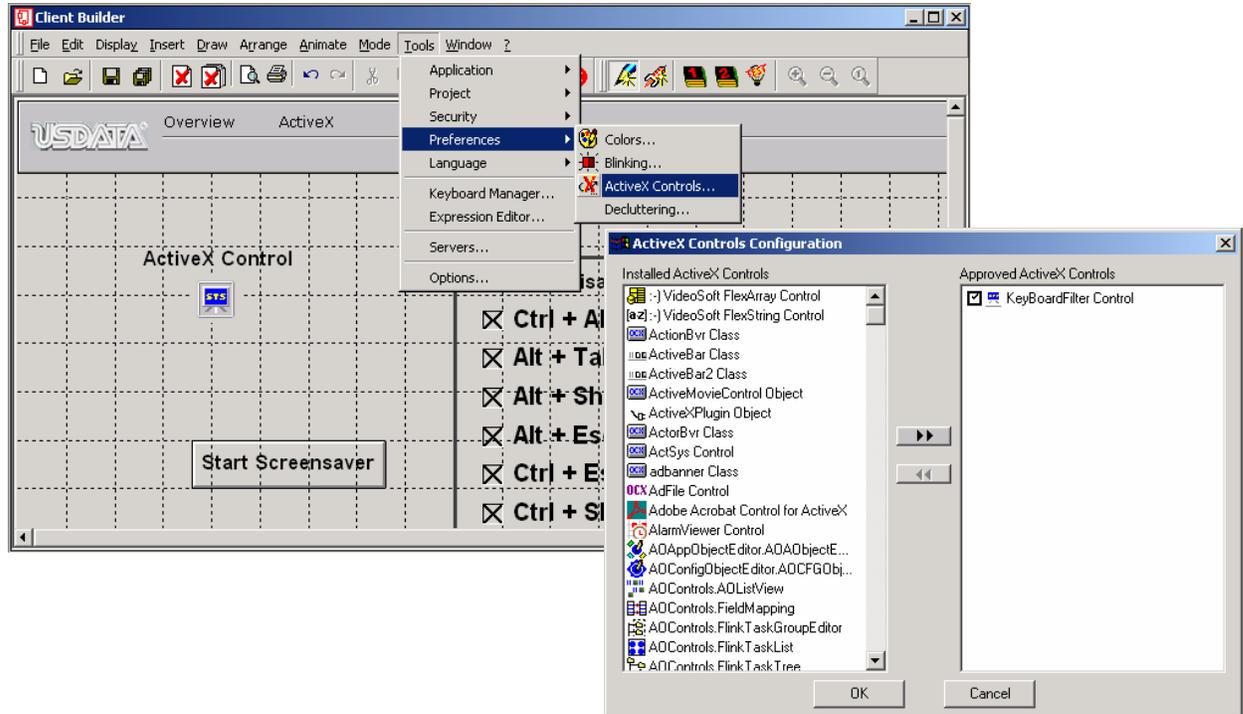


Figure 4.1. Setting the 'KeyboardFilter Control' as a favourite control in Client Builder.

If the control is added as an approved control, you can insert the control on a page, see the figure below.

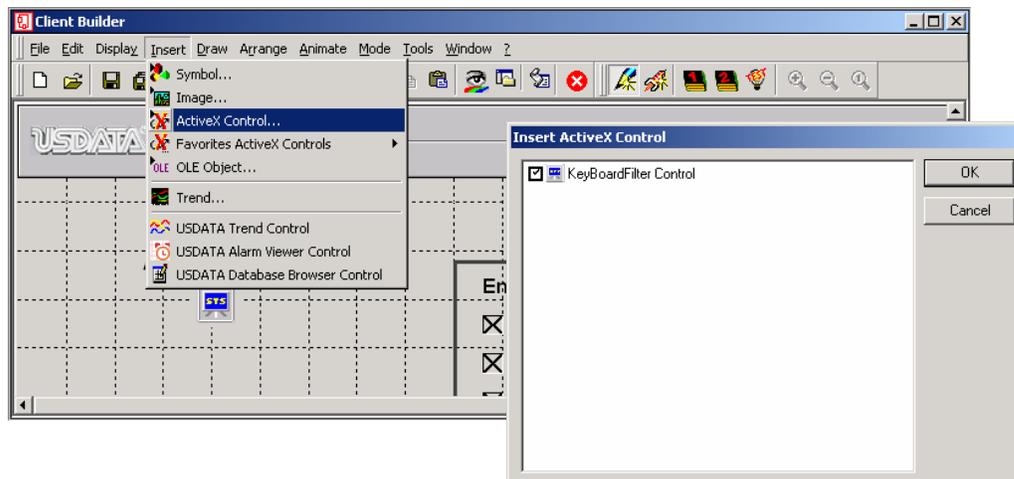




Figure 4.2. Inserting the 'KeyboardFilter Control' on a page.

After the insertion of the control on a page, you can set one property: the control can be visible or not. A visible control looks just like the icon on the page in the figure above. An invisible control is present on a page, but invisible for the user (and developer).

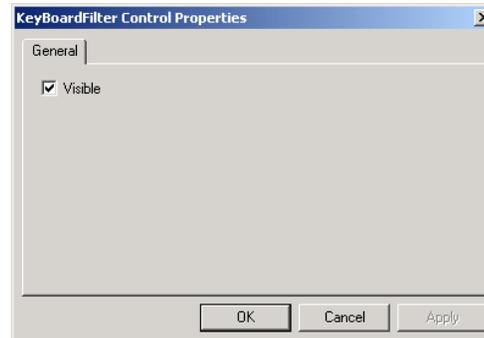


Figure 4.3. Properties of the ActiveX control.

To disable or enable keystrokes the appropriate methods of the control should be invoked. The control has several methods and properties which you can invoke, retrieve or set. An example of invoking a method is given in the sample script below.

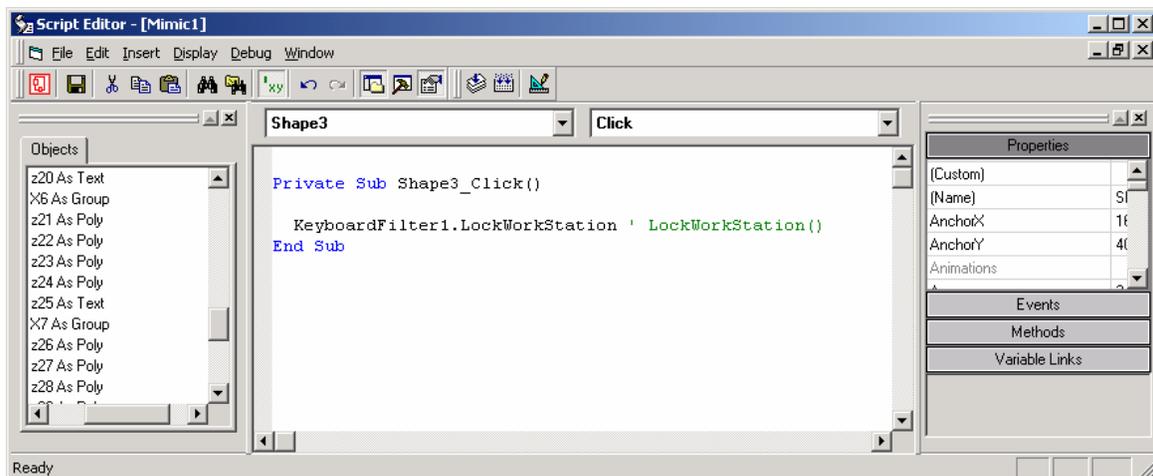


Figure 4.4. A script, invoking a method of the 'KeyboardFiltering Control'.



4.1 Properties

There is only one property of the control that can be read and written to, which is 'Visible'. This is the same property which is displayed as an option on the configuration dialog of the control. The other properties are read-only, and are standard properties of an ActiveX object.

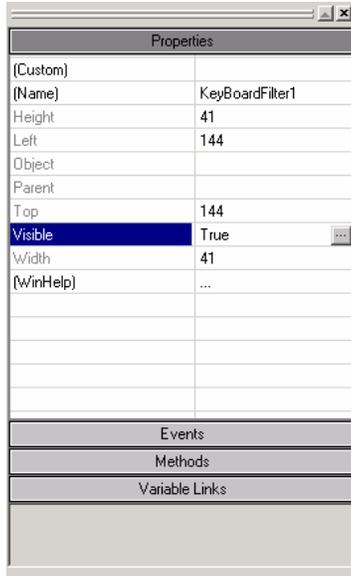


Figure 4.5. 'KeyboardFiltering Control' properties.

4.2 Methods

The methods of the 'KeyboardFilter Control' are functions to disable, enable keystrokes, lock the workstation or invoke the screensaver.

| Method | Function prototype |
|------------------------|---|
| AboutBox | <p>Sub AboutBox ()</p> <p>Show the about box of the control, the dialog is dismissed with the 'Ok' button.</p> |
| DisableKey | <p>Sub DisableKey (ByVal ScanCode As Integer, ByVal Shift As Boolean, ByVal Alt As Boolean, ByVal Control As Boolean)</p> <p>Disable the specified keystroke (Scancode), and define the exact key combination with Control, Alt and/or Shift.</p> |
| DisableLockWorkstation | <p>Sub DisableLockWorkstation (ByVal Disable As Boolean)</p> <p>Disable the 'Lock Computer' button on the security page, that is invoked with the key combination: Control+Alt+Delete.</p> |
| DisableTaskManager | <p>Sub DisableTaskManager (ByVal Disable As Boolean)</p> <p>Disable the 'Task Manager' button on the security page, that is invoked with the key combination: Control+Alt+Delete.</p> |
| EnableAllKeys | <p>Sub EnableAllKeys ()</p> <p>Just enable all keystrokes.</p> |
| EnableKey | <p>Sub EnableKey (ByVal ScanCode As Integer, ByVal Shift As Boolean, ByVal Alt As Boolean, ByVal Control As Boolean)</p> <p>Enable the specified keystroke (Scancode), and define the exact key combination with Control, Alt and/or Shift.</p> |



| | |
|----------------------|---|
| IsKeyDisabled | <p>Sub IsKeyDisabled (ByVal ScanCode As Integer, ByVal Shift As Boolean, ByVal Alt As Boolean, ByVal Control As Boolean)</p> <p>Retrieve the actual state (enabled = 0, disabled <> 0) of the specified keystroke (ScanCode), the combination of Control, Alt and Shift is also defined.</p> |
| LockWorkStation | <p>Sub LockWorkStation ()</p> <p>Lock the workstation. If the key combination 'Control+Alt+Delete' is disabled, the user can never unlock the system!</p> |
| ReplaceKey | <p>Sub ReplaceKey (ByVal ScanCode As Integer, ByVal Shift As Boolean, ByVal Alt As Boolean, ByVal Control As Boolean, ByVal ReplaceCode As Integer)</p> <p>Replace the specified keystroke (Scancode)with the one given in 'ReplaceCode', and define the exact key combination with Control, Alt and/or Shift. The Control, Alt and Shift setting also apply for the replacement keystroke.</p> |
| SetScreenSaverSecure | <p>Sub SetScreenSaverSecure (ByVal Secure As Boolean)</p> <p>Set or remove the password protection from the screensaver, specify a boolean value true to secure the screensaver.</p> |
| StartScreenSaver | <p>Sub StartScreenSaver ()</p> <p>Start the (default) screensaver on the system, if there is no screen saver activated the function will fail.</p> |

You can find the most used scancodes in the list below.

| 'Key | Hex code | Decimal |
|---------------|----------|---------|
| 'DEL | 53 | 83 |
| 'ESC | 1 | 1 |
| 'TAB | F | 15 |
| ' FLYWINL | 5B | 91 |
| ' FLYWINR | 5C | 92 |
| ' POPUPMENU | 5D | 93 |
| ' F1 | 3B | 59 |
| ' F2 | 3C | 60 |
| ' F3 | 3D | 61 |
| ' F4 | 3E | 62 |
| ' F5 | 3F | 63 |
| ' F6 | 40 | 64 |
| ' F7 | 41 | 65 |
| ' F8 | 42 | 66 |
| ' F9 | 43 | 67 |
| ' F10 | 44 | 68 |
| ' F11 | 57 | 87 |
| ' F12 | 58 | 88 |
| ' CAPS_LOCK | 3A | 58 |
| ' PRINTSCREEN | 37 | 55 |
| ' ENTER | 1C | 28 |
| ' BACKSPACE | E | 14 |
| ' SCROLL_LOCK | 46 | 70 |
| ' NUM_LOCK | 45 | 69 |
| ' INSERT | 52 | 82 |
| ' HOME | 47 | 71 |
| ' PAGE_UP | 49 | 73 |
| ' DELETE | 53 | 83 |
| ' End | 4F | 79 |
| ' PAGE_DOWN | 51 | 81 |
| ' UP | 48 | 72 |
| ' Left | 50 | 80 |
| ' Right | 4B | 75 |
| ' DOWN | 4D | 77 |



5 Error messages

If an error condition is present in the application, an appropriate message is sent to the FactoryLink kernel. The message can be seen in the 'run-time manager' screens which are part of the starter application. In the standard screens the error message will appear to the right of the 'FLNTSYS' task. Errors are marked by a red button, if an error occurred but the task can continue. Severe errors cause a FactoryLink task to stop, these errors are marked with an error description and a grey button (same as an inactive task).

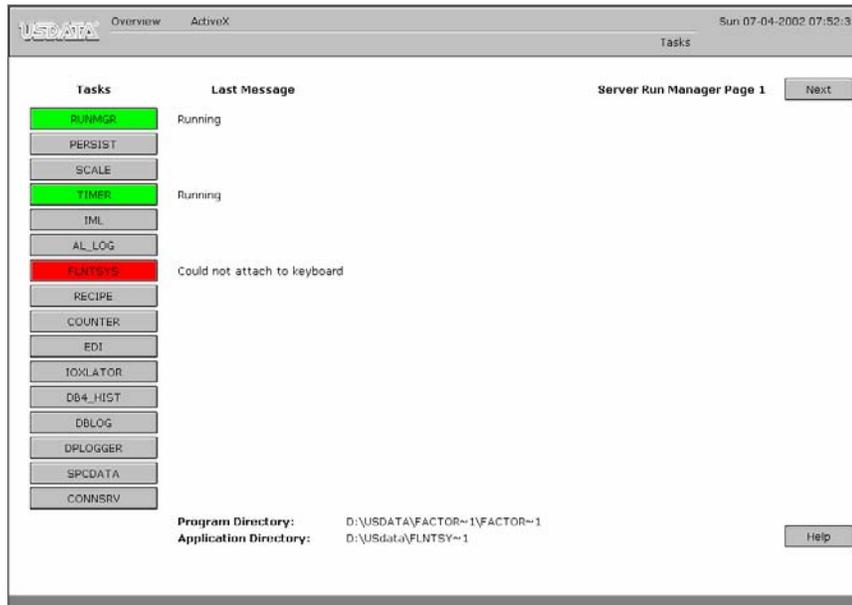


Figure 4.1. Run-time manager screen.

FLNTSYS Could not attach to keyboard

The application was unable to find the keyboard filter device, keyfiltering is not possible.

Possible solutions: Make sure the keyboard filter driver is installed and running, to start a device in NT4 go to the control panel → devices → Keyboard filter, and try to start the device if it is not running. For Windows2000 open the control panel → Administrative tools → Computer management. In the application computer management select in the tree on the left side: Device manager → Non-plug and play drivers → Keyboard Filter. If the entry 'non-plug and play drivers' is not visible, activate it with the menu command 'View → Show hidden devices'. For starting a device one needs administrator rights. If the driver is not in the list (re)install the application.

FLNTSYS System tag for exiting FactoryLink is not found

The application was unable to find the system tag to shutdown the FactoryLink application, shutting down FactoryLink is now impossible. Possible causes are a corrupted database (see 'Could not access '%s') or missing of the system tag, the system tags can be removed!

Possible solutions: Make sure the system tags are all present.

FLNTSYS Changing system information failed

Changing the system settings for screensaver, retrieving disk space, shutting down the system failed. Most likely cause is not enough rights to change or even request a system setting.

Possible solutions: increase the rights of the user, or log on as a different user with more rights.



FLNTSYS

Reading system information failed

Reading the system settings for screensaver, retrieving disk space, shutting down the system failed. Most likely cause is not enough rights to change or even request a system setting.

Possible solutions: increase the rights of the user, or log on as a different user with more rights.

FLNTSYS

Could not access '%s'

The application was unable to access the specified tag (on position %s), most likely cause is a corrupted application database and/or CT-file.

Possible solutions: The normal advised action to repair a damaged application database, try generating the CT-file by hand. One point to check is if the application is correctly installed in your FactoryLink system directory. There must be entry with FLNTsys in both the {FLINK}/ac/titles file and the {FLINK}/ctgen/ctlist file. Is either one of them is missing try to reinstall the application.

FLNTSYS

CT-file not found

The application was unable to access the task specific CT-file, the file was not found in the application directory.

Possible solutions: Make sure the FINTsys task has a configuration in the Configuration Explorer, if so please check if this is the same application as you started. Check if there is a configuration file 'flntsys.ct' present in the application, directory: {FLAPP}\shared\ct. If there is no such file present, see if FactoryLink is instructed to generate this file. In the ASCII-file '{FLINK}\ctgen\ctlist' there must an entry: **flntsys: ntsys_k ntsys_s ntsys_m.**

FLNTSYS

No triggers found in CT-file

The FINTsys task found a configuration file 'flntsys.ct' in the application directory, however there are no triggers defined for the task.

Possible solutions: Make sure the FINTsys task has a valid configuration in the Configuration Explorer, if so please check if this is the same application as you started. Check if there is a configuration file 'flntsys.ct' present in the application, directory: {FLAPP}\shared\ct. If there is no such file present, see if FactoryLink is instructed to generate this file. In the ASCII-file '{FLINK}\ctgen\ctlist' there must an entry: **flntsys: ntsys_k ntsys_s ntsys_m.** If a configuration file (CT-file) present, please generate a list file of the configuration, before contacting the support desk. The listing file is generated with a utility called "ctlist.exe", check first if the program is present in the {FLINK}\bin directory, if so open a command prompt and go to the application directory. In the application directory is heck if there is a configuration file 'flntsys.ct' present in the application, directory: {FLAPP}\shared\ct. In the application directory go to the subdirectory: shared\ct, from there run the command: "ctlist flntsys.ct". The output can be redirected to a file, e.g. appending: "> d:\flntsys.txt" to the commandline. Contact the support desk for more help.



6 License Agreement

The use of this program is subject to the following terms and conditions.

Title To The Licensed Software

Title to the licensed software is NOT transferred or sold to the end user. The end user is granted a non-exclusive license to use the software on a SINGLE computer or computer work station. EACH computer or computer workstation must have its own licensed copy of the software.

Copyright Protection

This software is copyrighted material. It is protected by the copyright laws of the Netherlands, and other proprietary rights of RLD Automation. You may not make any changes or modifications to the program or the manual. You may not decompile, disassemble, or otherwise reverse-engineer the software in any way.

Limited Warranty

RLD Automation does not warrant that the licensed software will meet your requirements or that the operation of the software will be uninterrupted or error free. The warranty does not cover any media or documentation which has been subjected to damage or abuse by you or others. The software warranty does not cover any copy of the licensed software which has been altered or changed in any way. In other words there is no warranty either implied or expressed.

ANY IMPLIED WARRANTIES INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS OR A PARTICULAR PURPOSE ARE LIMITED TO THE TERM OF THE EXPRESS WARRANTIES. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Other Warranties

The warranties set forth above are in lieu of any and all other express or implied warranties, whether oral, written, or implied, and the remedies set forth above are the sole and exclusive remedies.

Limitation Of Liability

RLD Automation is not responsible nor liable in anyway for any problems or damage caused by the licensed software that may result from using the licensed software. This includes, but is not limited to, computer hardware, computer software, operating systems, and any computer or computing accessories. End user agrees to hold RLD Automation harmless for any problems arising from the use of the software.

RLD Automation SHALL NOT IN ANY CASE BE LIABLE FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, INDIRECT OR OTHER SIMILAR DAMAGES ARISING FROM ANY BREACH OF THESE WARRANTIES EVEN IF RLD Automation OR ITS AGENTS OR DISTRIBUTORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

In no case shall RLD Automation's liability exceed the license fees paid for the right to use the licensed software.

The above constitutes the license agreement for this program. It supersedes any and all previous license agreements.

© Copyright 2000 RLD Automation, the Netherlands, all rights reserved.